

How to reset my Vigor3300 series router to default?

For Vigor3300V:

We can easily reset Vigor3300V to default by pressing the **Factory Reset** button on the front panel for 7-10 seconds. All LEDs will be lit then off in a second, then Vigor3300V will boot up with default settings. Please login Vigor3300V by default username “draytek” and password “1234” while seeing ACT LED is blinking once per second.


For Vigor3300/3300B+:

Since there is no Factory Reset button on the front panel, we have to reset Vigor3300/Vigor3300B+ to factory default by connecting to its console interface. Refer to the steps below:


1. Please connect the COM1 or COM2 port of your PC to the console port of router with a Console cable (gray) and a RJ45 to RS232 (9 pin) converter which you have gotten from the retailer together with the router.




2. Open the hyper terminal tool in your host PC.
3. Input a name and select an icon for this connection then click **OK** button to the next step.

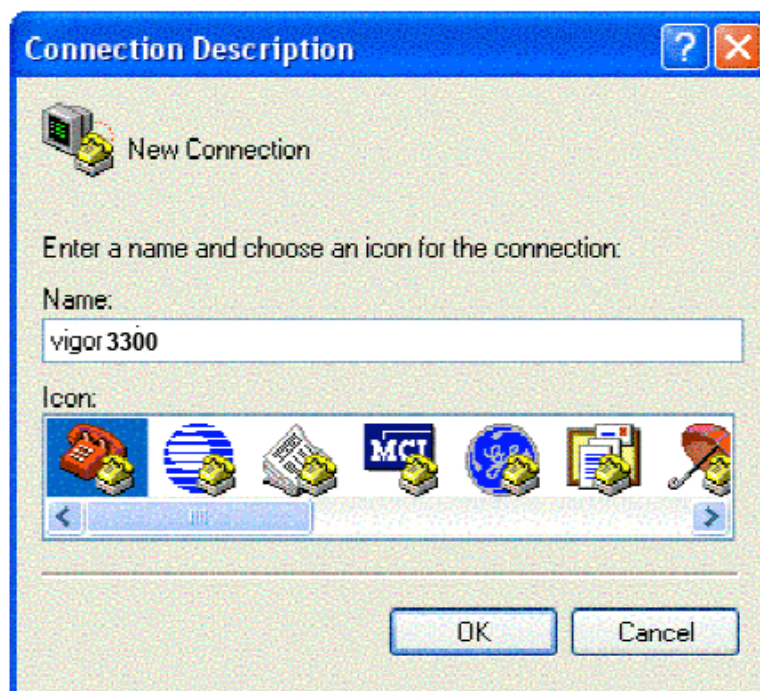


4. Choose **COM1** or **COM2** then click **OK** button to the next step.

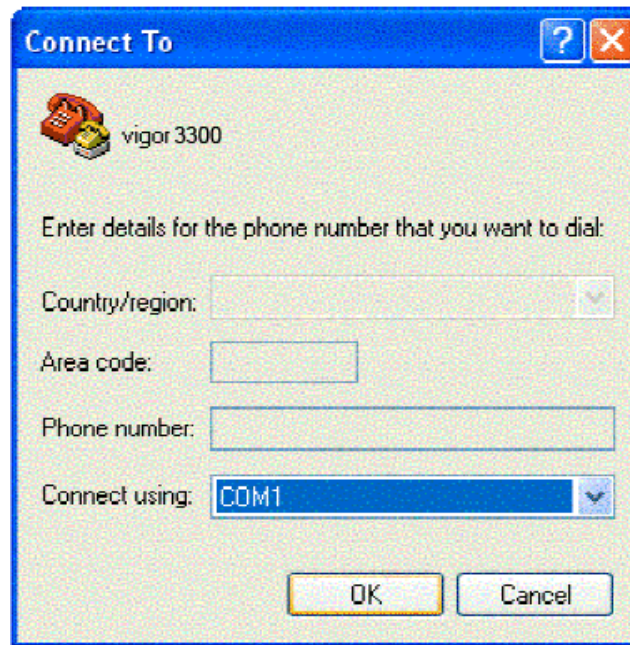


5. Choose **57600** as the **Bits per second**, and **None** for **Flow control**.

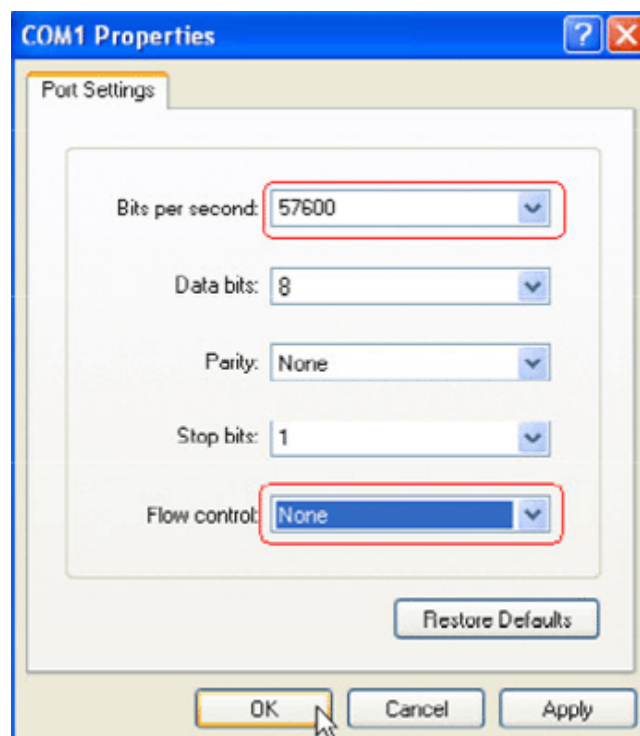

6. Input username “DRAYTEK” and password “vigor3300” to login router.

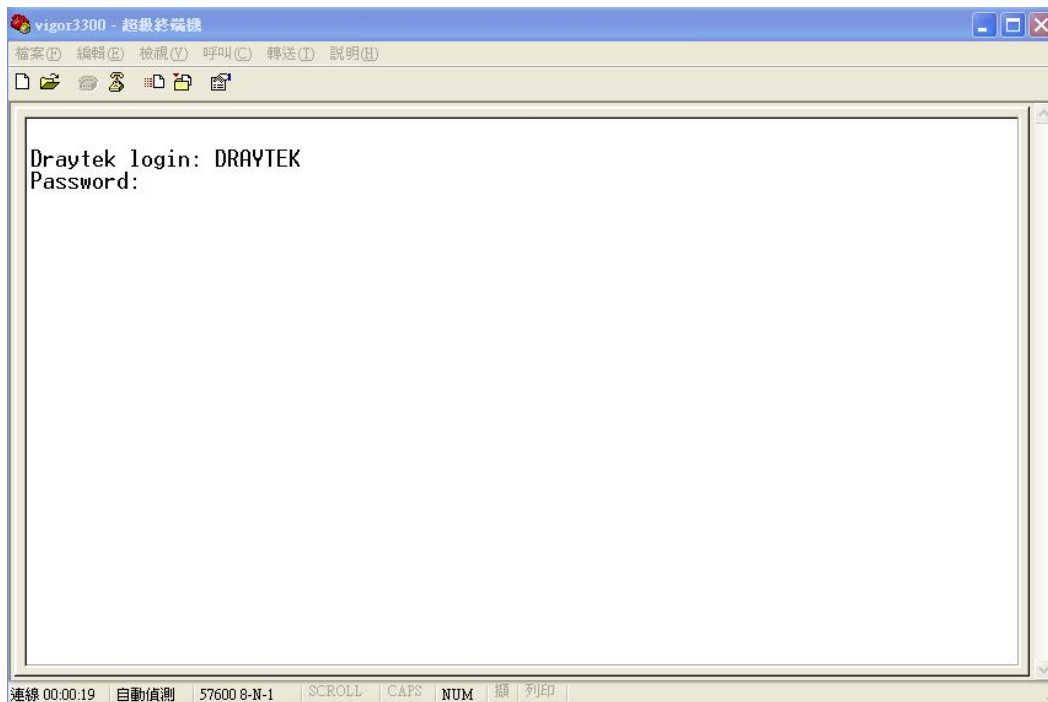

7. Type the command, **system reboot default** and **y** to reset Vigor3300/ Vigor3300B+.

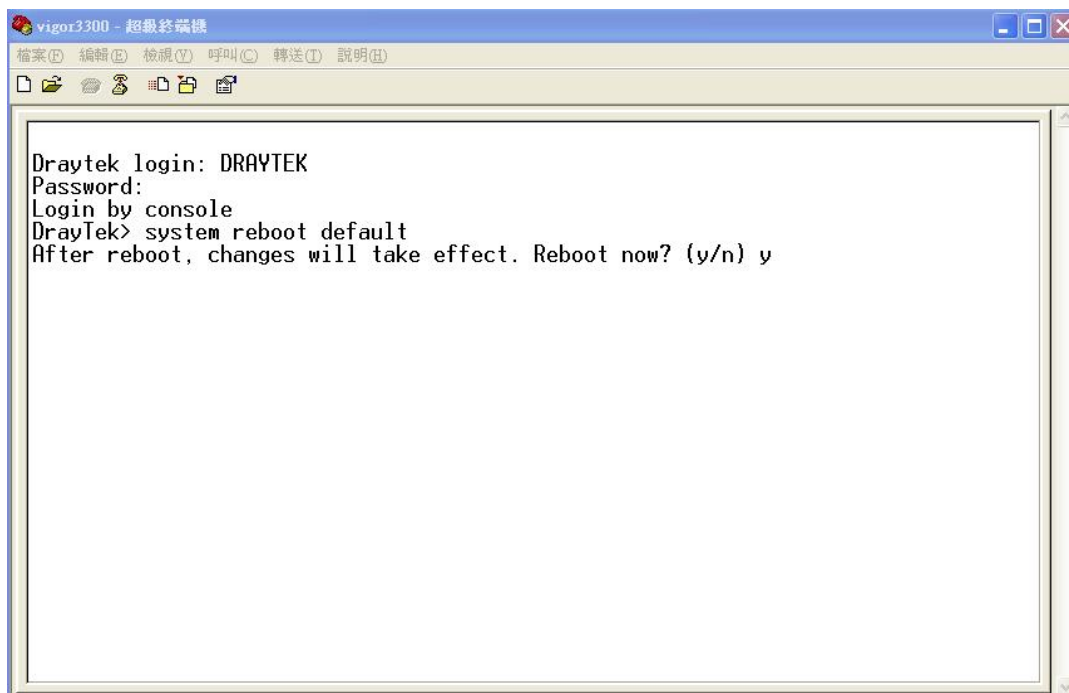

8. All LEDs will be lit then off in a second, then Vigor3300/ Vigor3300B+ will boot up with default settings.

Now, please login Vigor3300/ Vigor3300B+ by default username “draytek” and password “1234” while seeing ACT LED is blinking once per second.